


Installing the IDpunch 7



Use the following instructions to install the IDpunch 7 Finger Reader:

1. Mount the IDpunch 7 back plate securely to the wall using the four mounting screw holes. The time clock should be within 6 feet from an AC outlet and a network jack. The recommended height should be approx. 60 inches from the floor.

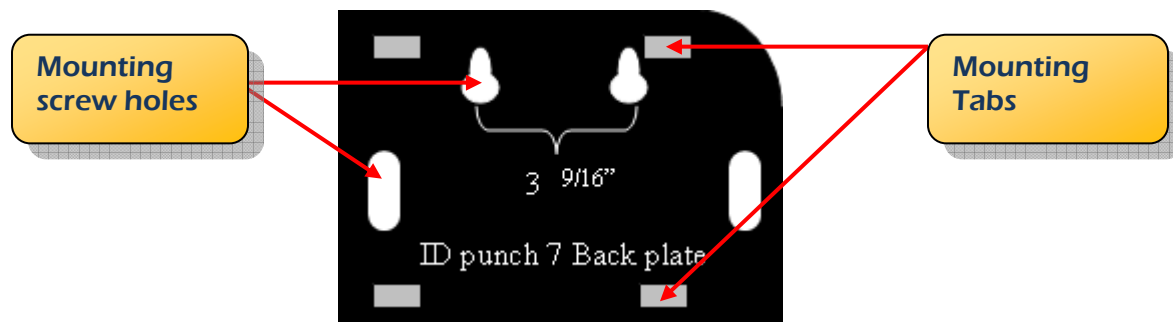

2. Mount the IDpunch 7 time clock over the back plate mounting tabs.

3. Secure the IDpunch 7 time clock to the back plate using the four black machine screws



4. Connect the Power cord and Ethernet cord to the bottom of the IDpunch 7
Note: Do not modify the power supply cord.

5. (Optional) Screw the included black cover to the wall over the Ethernet and power cords to prevent the cables from being disconnected.

6. Connect the other end of the Ethernet cord to the RJ45 wall jack. Insure that the jack is patched in and has internet connectivity.

7. Connect the time clock power transformer to the AC outlet.

Once connected the time clock will show the current time and date!